



-Installation instructions- Handlebar riser

- F 900 R / XR from Modell 2020 –**
- F 850 GS / Adventure Modell 2018-19 –**



Part number: S700395-F25

General notes!



AC Schnitzer Handlebar riser

Important notes!

These installation instructions must be read in their entirety before starting the installation work. completeness with regard to every step of the work. We reserve the right to make technical, editorial and content-related changes! AC Schnitzer accepts no liability for damage caused by improper installation!

Check goods for completeness and intactness **before** starting work.
Later complaints cannot be considered.

These installation instructions are intended exclusively for use by authorised AC Schnitzer or BMW dealers. The target group for these installation instructions is always qualified personnel trained to work on BMW vehicles. with the appropriate specialist knowledge and tools. Knowledge of material properties and standards are assumed! Work on steering systems should only be carried out by competent persons!

Before mounting:

For assembly, the vehicle must be adequately secured against rolling away or overturning.
We recommend using the standard main stand or an original BMW mounting stand! Keep children and pets away from the work area!
Danger of accident due to getting caught or electrical short circuit! Therefore, take off jewellery (necklaces, watches, rings, etc.) before starting work!

After mounting:

After completion of the work, a test drive must be carried out if necessary! After the test drive has been completed, all bolted connections must be checked for tightness and all moving parts must be checked for sufficient clearance.


Installation time (1 AW = 5 minutes)

The installation time is approx. **3 AW**, which may vary depending on the condition and equipment of the vehicle.
(This value is only a recommendation and is not binding!)

Tools required

- Standard Torx tool
- Standard Allen tool
- Standard socket spanner tool
- Torque spanner
- Screw glue medium strength

Delivered components

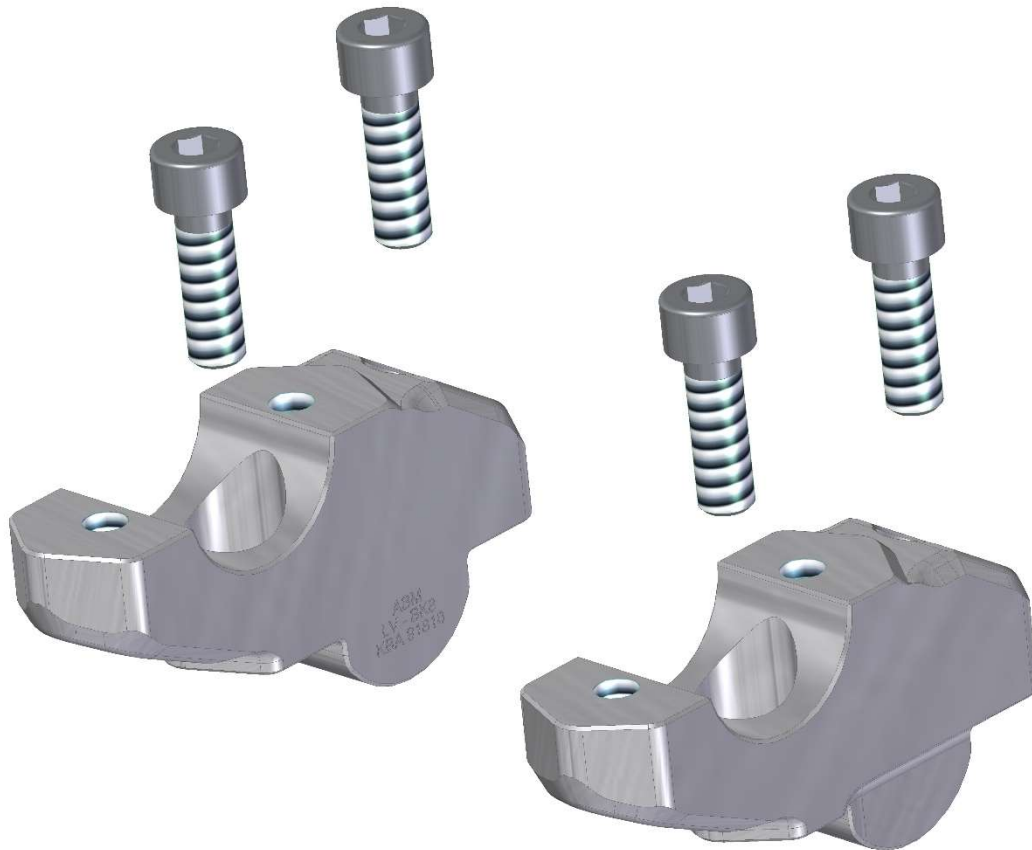

AC Schnitzer handlebar riser kit
(only available complete)

Assembly instruction number: S700395-F25/ Stood: 09.11.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

Mounting

- Park the vehicle safely and secure it against roll away.
- Protect the work surface from damage etc..
- Loosen the four fastening screws of the navigation holder counterclockwise and remove.
- Place the holder on a soft surface on the tank. place.
- Loosen the four fastening screws of the handlebar counterclockwise and remove.

Hold the handlebars firmly and make sure that they do not cannot twist (risk of damage).



Installation instructions



AC Schnitzer

- Remove the original clamp upper parts.
- Remove the handlebars from the triple clamp and carefully lay it down.
- Clean the contact surfaces



- Moisten the enclosed fixing screws with "medium strength" screw adhesive.



- Insert the AC Schnitzer handlebar riser supplied into the triple clamp. Insert the fork bridge according to the illustration. Pay attention to the markings R (right) and L (left) on the handlebar risers.



- Prepared fixing screws (4 pcs.)
Screw in by hand and then tighten.
- Tightening torque: 21Nm.

- Centre the handlebars according to the markings.
- Position the original upper parts of the clamping block in such a way that no gap is visible.



Assembly instruction number: S700395-F25/ Stood: 09.11.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

Installation instructions



AC Schnitzer

- Original front and rear fixing bolts
pre-tighten alternately with 10Nm, then 15Nm and
finally tighten with 21Nm.



- Screw in the four fastening screws of the navigation holder
screw in and fasten.

Tightening torque: 6 Nm



- This component has an ABE! This ABE must be carried
every journey.
- The marking of the component is only on one of the two com
ponents!
- customers to the changed seating position and driving dyna-
mics point out.
- The freedom of movement of all moving parts, such as
brake and clutch lines, throttle cables or electrical
cables must be checked and, if necessary, repaired.
- Compatibility with other products has not been verified
and cannot be guaranteed!



Errors and omissions excepted!

Assembly instruction number: S700395-F25/ Stood: 09.11.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135