



- Installation instructions -

Motor pad left

- F 900 R/XR from Modell 2020 -



Part number: S700396-F15

General notes!



AC Schnitzer – F 900 R/XR from Modell 2020-

Important notes!

It is essential to read these installation instructions **before** starting installation work. AC Schnitzer accepts no liability for damage caused by improper installation!

These installation instructions are intended exclusively for use by authorised AC Schnitzer or BMW dealers. The target group for these installation instructions is always specialist personnel trained on BMW vehicles with the appropriate specialist knowledge and tools. Knowledge regarding material properties and standards is assumed!

The crash pads offered by AC Schnitzer provide protection for the frame and the add-on parts in the event of "overturns" or so-called "slips". Unfortunately, even these components are no guarantee for accidents without consequential damage. So it is quite possible that the crash pads hook onto protruding parts such as curbs, manhole covers, kerbs, etc. during "slides" and give way to the force acting on them.

Any resulting consequential damage is the sole responsibility of the person who caused the fall and cannot be claimed from AC Schnitzer. Please inform your customers about this fact!

Mounting

All work must be carried out in accordance with the applicable safety regulations (e.g. protective goggles).

Paint

n/a

Installation time (1 AW = 5 minutes)

The installation time is approx. 3 AW, which may vary depending on the condition and equipment of the vehicle..

Paint (1 AW = 5 minutes)

n/a

Required tools

- Torx spanner
- Socket spanner
- Hexagon socket spanner
- Cleaning agent
- Torque spanner


Assembly instruction number: S700396-F15 / Stood: 28.10.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

Delivered components



AC Schnitzer

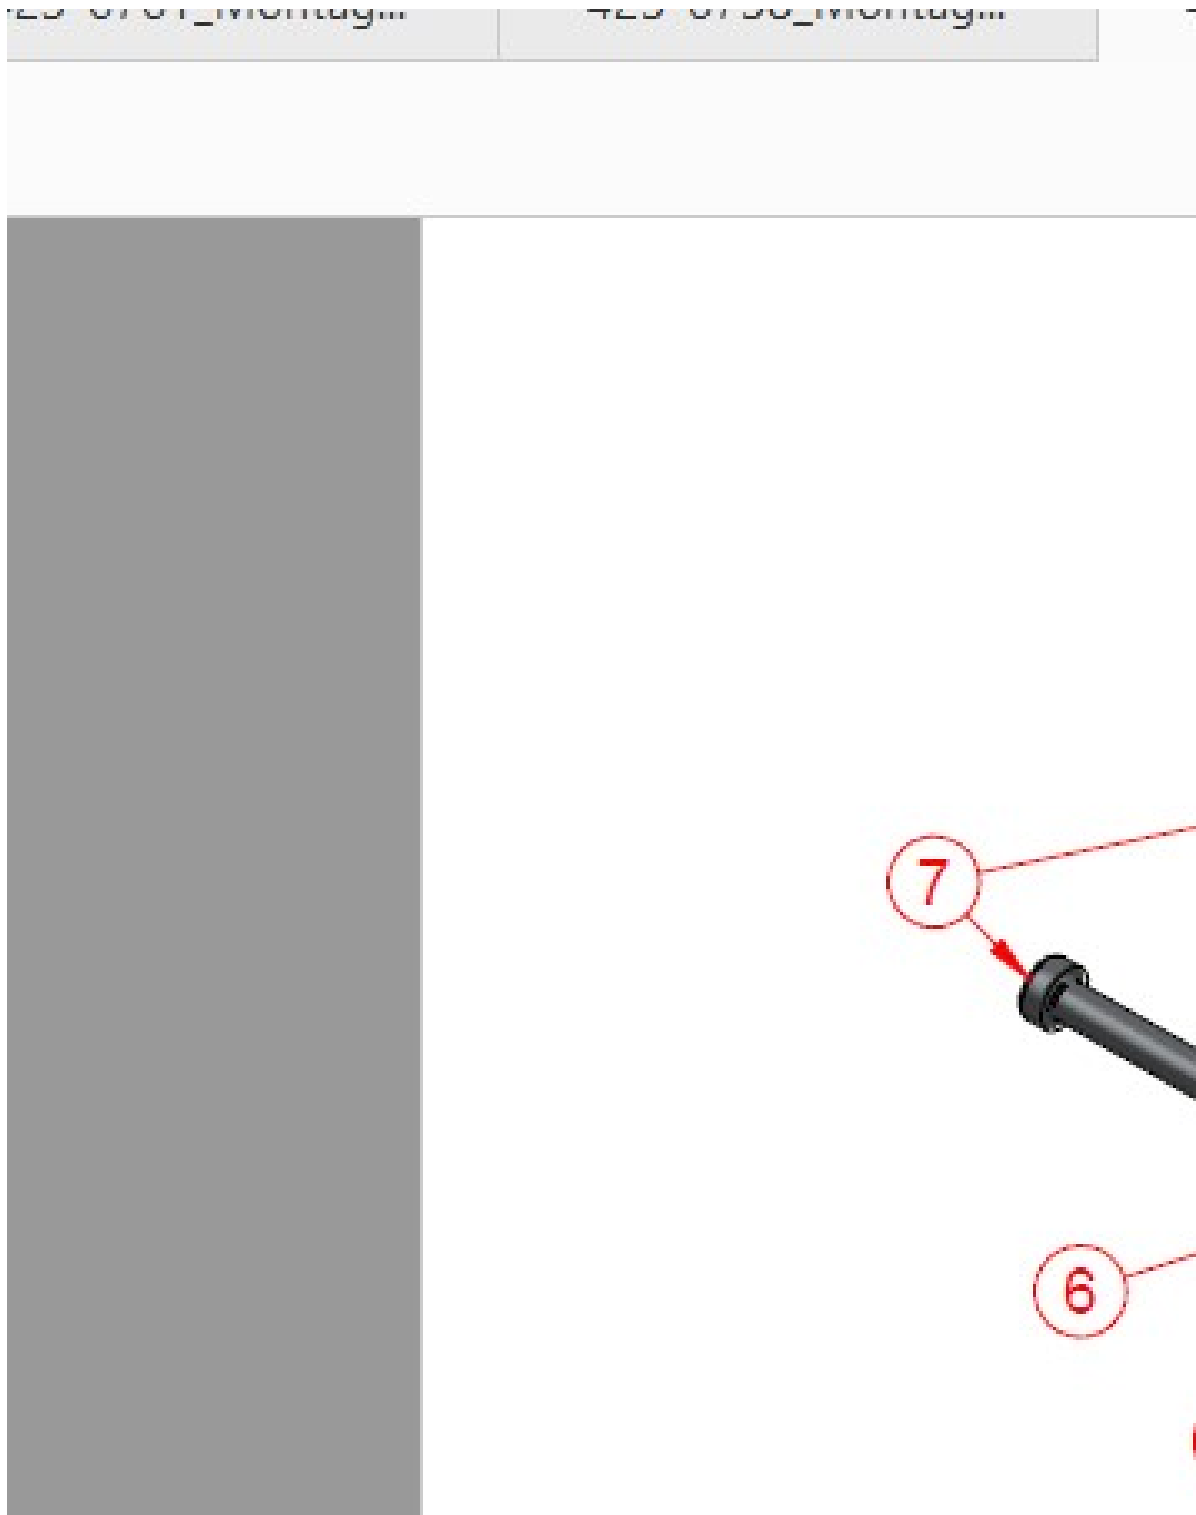

Assembly instruction number: S700396-F15 / Stood: 28.10.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

Installation instructions



AC Schnitzer

Park the vehicle securely with the main stand or a motorcycle stand.



Remove the three lower screws of the engine cover (see picture).



Fit the holder to the pad with screws, washers and the spacers to the pad.

Torque: 4.5 Nm



Attach the motor guard to the motor with the screws and washers to the motor Mount.

Torque: 16 Nm

After a test drive, check the engine cover for leaks.
Check for leaks.



Assembly instruction number: S700396-F15 / Stood: 28.10.2020

AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135