



-Fitting Instructions-

Heritage Cover Set



Part No.: S700-68774-15

General Notes!



AC Schnitzer -

Important Notes!

Important Notes!

These Fitting Instructions must be read carefully before starting work, and do not claim to be complete in relation to every work step. Technical, editorial and content changes are reserved!! AC Schnitzer bears no liability for damage caused by incorrect installation!

Check goods for completeness and absence of damage before starting work.

Later complaints cannot be accepted.

These Fitting Instructions are intended solely for use by authorised AC Schnitzer or BMW dealers. These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge and tools. Knowledge concerning material properties and standards is assumed! Work on hydraulic systems should only be carried out by trained personnel.

Before installation:

For installation, protect the vehicle adequately against rolling away or falling over.

We recommend the use of the normal main stand or an original BMW assembly stand! Keep children and animals away from the working area!

There is a risk of accident from tripping or electrical short-circuit! Therefore remove all jewellery (chains, watches, rings etc.) before starting work.

After installation:

After completion of the work, carry out a test ride. After the test ride, check all bolt connections for tightness and ensure that all moving parts have adequate clearance.

Fitting Time (1 unit = 5 minutes) □ □ *The fitting time is around 2 units, which may vary depending on vehicle condition and equipment level.*

(This value is a recommendation only and is not binding!)

Tools Required

- Standard automotive Torx driver

Fitting Instructions No.: S700-68774-15 Issue: 10 / 2014 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135 / www.ac-schnitzer.de

Contents



AC Schnitzer Heritage Cover Set

Chapter	Page
1. Components supplied	4□
2. Fitting the AC Schnitzer Cover Set	5

Components Supplied



AC Schnitzer Heritage Cover Set



A AC Schnitzer "Heritage" Cover Set

Fitting Instructions



AC Schnitzer Heritage Cover Set


2. Fitting

- Position vehicle straight before starting work.
- Apply cardboard or cloth covers to both panniers, to absorb any escaping fluid.
- Release all 4 fixing bolts on each cover and remove (retain for re-use) (Fig. 1)

WARNING: Capture any escaping fluid immediately and neutralize accordingly!

- On both covers, remove standard gasket and transfer to AC Schnitzer cover supplied.
- First wipe gaiter with a lint-free cloth (Fig. 2).

- Replace any lost fluid according to BMW specifications.
- Clean reservoir edge with a lint-free cloth.
- Apply AC Schnitzer cover following the contour, and secure using the standard bolts.
- Ensure that the bolts are refitted on the same side from where they were removed (Fig. 3).

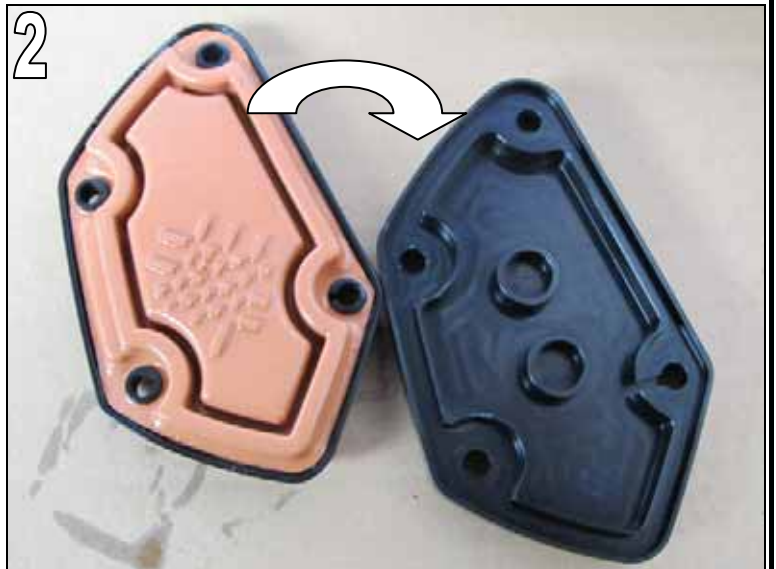

Fitting Instructions No.: S700-68774-15 Issue: 10 / 2014 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135 / www.ac-schnitzer.de