



-Assembly instruction-

License plate holder

(without drop pad)



Part-no.:S700-68814-15

AC Schnitzer License plate holder central

Important information!

Important information!

These assembly instructions must be read completely before starting the installation work and do not claim to be complete with regard to every step of the installation process. Subject to technical and editorial changes, as well as changes in content! AC Schnitzer accepts no liability for damage caused by improper installation!

Check the goods for completeness and integrity before starting work.

Later complaints cannot be considered.

These assembly instructions are intended for use only by authorised AC Schnitzer or BMW dealers. The target group of these assembly instructions is in all cases BMW vehicles trained specialist personnel with the appropriate expertise and tools. Knowledge of material properties and standards is required! Work on hydraulic systems should only be carried out by qualified personnel!

Before installation:

The vehicle must be adequately secured against rolling away or falling over for installation.

For this purpose, it is recommended to use the standard main stand or an original

BMW mounting stand! Keep children and pets away from the work area!

Risk of accident due to catching or electrical short circuit! Therefore, you should leave jewellery (chains, watches, rings etc.) before starting the work!

After installation:

After completion of the work, a test drive may have to be carried out! After the test drive has been completed, all bolted connections must be checked for firm seating and all moving parts checked for sufficient clearance..

The lighting unit, in particular the brake light, must then be checked for proper functioning. The component is subject to registration.

Installation time (1 AW = 5 minutes)

The installation time is approx. 9 AW, which can vary depending on the condition and equipment of the vehicle. (This value is only a recommendation and is not binding!)

Required tool

- Standard Torx tool
- Standard motor vehicle tool/ Inbus
- Soldering station
- Screw adhesive (medium strength)

Assembly instruction No.: S700-68814-15/ Standing: 05.10.2017 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Phone. 0241/5688 -300 fax -135 / www.ac-schnitzer.de

AC Schnitzer License plate holder without drop pad

Chapter	page
1. Delivered components	4
2. Installation of the AC Schnitzer License plate holder	5

A collection of motorcycle accessories and hardware laid out on a light-colored surface. The items include a coiled black cable, a black mounting bracket with multiple holes, a black handlebar mount with a silver plate, a black rearview mirror with a red reflective surface, and various hardware such as bolts, nuts, washers, and zip ties. A small black box with a white label is also visible.

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Phone. 0241/5688 -300 fax -135 / www.ac-schnitzer.de

Assembly instruction

AC
SCHNITZER


AC Schnitzer License plate holder without drop pad

2. Installation


- Park the vehicle safely and secure it against falling over or rolling away. (Fig. 1)



- Loosen and remove the rear fastening screw of the brake calliper as standard. (Fig. 2)

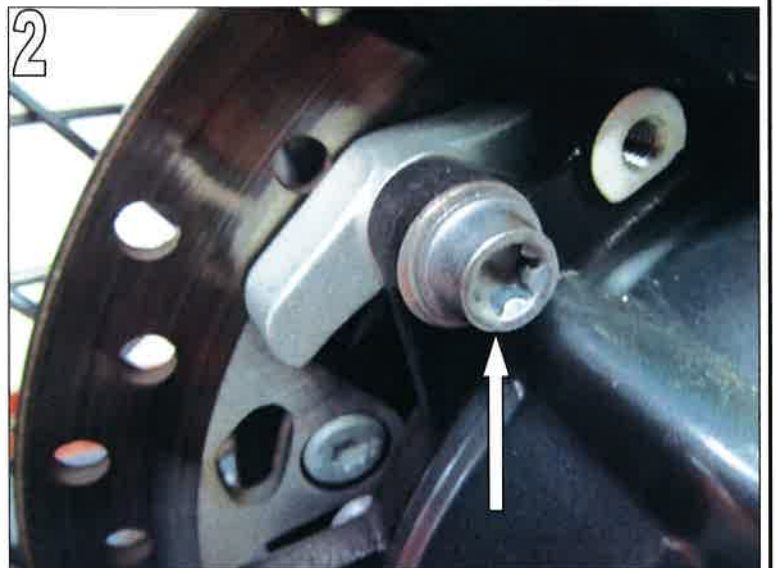

- Connect the basic holder with the number plate holders, apply screw glue to the M6x30mm screws supplied and fix them with 9.5Nm. (Fig. 3)

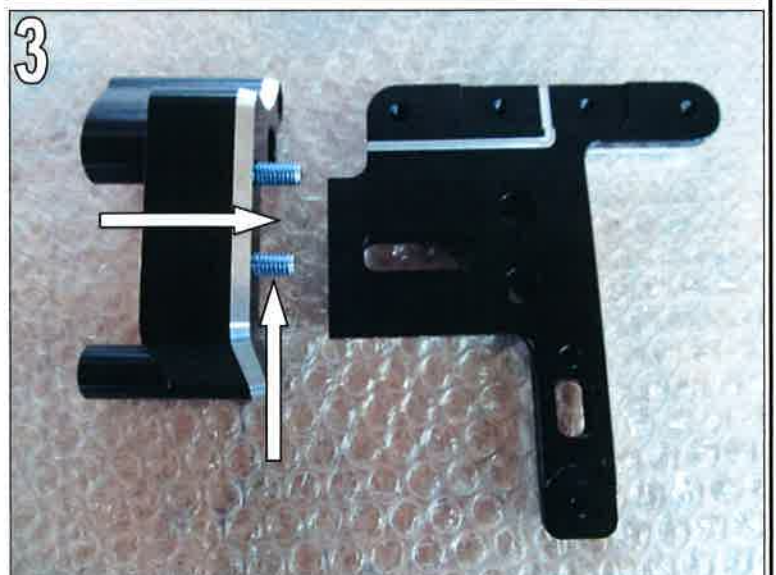

Assembly instruction No.: S700-68814-15/ Standing: 05.10.2017 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Phone. 0241/5688 -300 fax -135 / www.ac-schnitzer.de


Assembly instruction




AC Schnitzer License plate holder without drop pad

2. Installation


- Thread the cable of the license plate lighting according to the illustration through the hole provided in the holder. Make sure that the recesses are visible from the front. (Fig. 4)

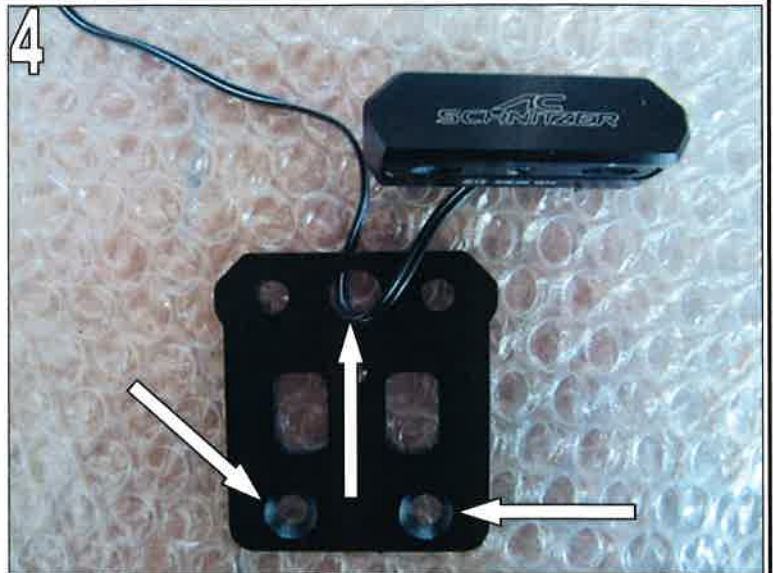

- From the rear side, mount license plate light with supplied M6 x 10mm screws and washers (9.5Nm). Sprinkle screws with screw glue beforehand. (Fig. 5)

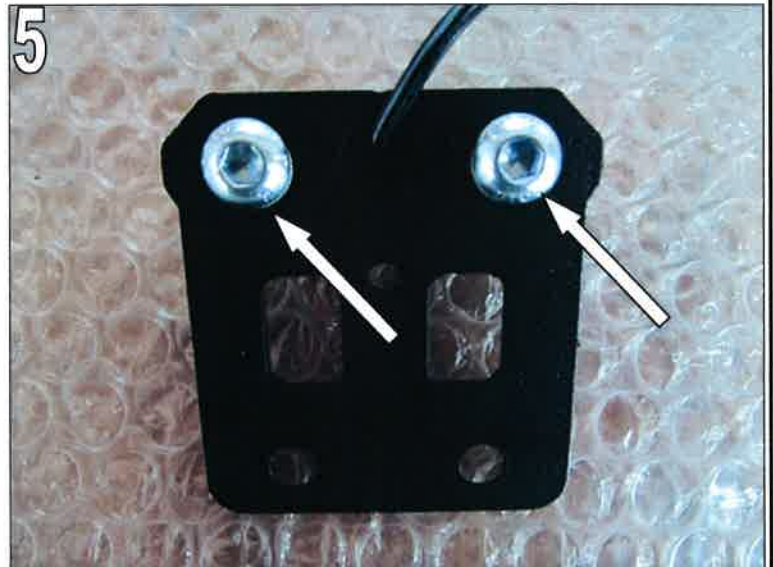

- Lay the license plate lighting cables in the cable ducts provided for this purpose and screw the holder of the license plate lighting to the license plate holder. Apply screw glue to countersunk screws before screwing in. (Fig. 6)

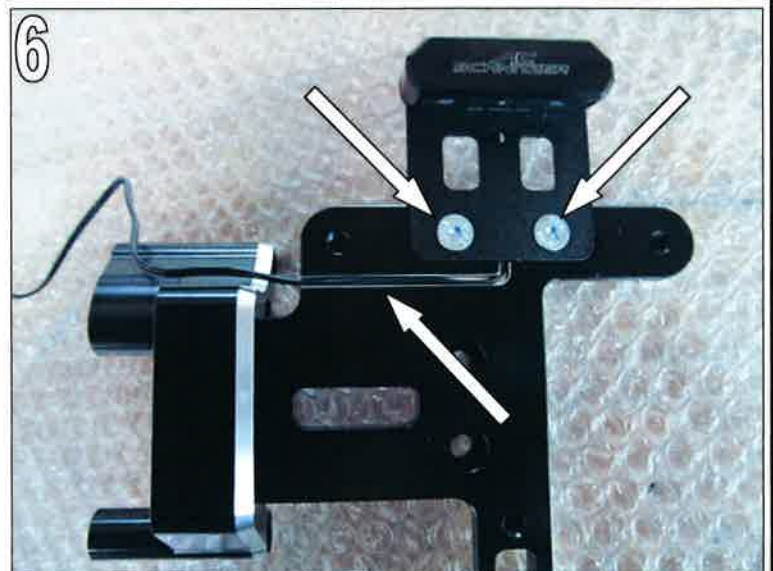

Assembly instruction No.: S700-68814-15/ Standing: 05.10.2017 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Phone. 0241/5688 -300 fax -135 / www.ac-schnitzer.de


Assembly instruction




AC Schnitzer License plate holder without drop pad

2. Installation


- Fasten the bracket of the provided reflector to the license plate holder with M5 screw and washer, apply screw glue to the screw beforehand. Tightening torque 5.5Nm (Fig. 7)

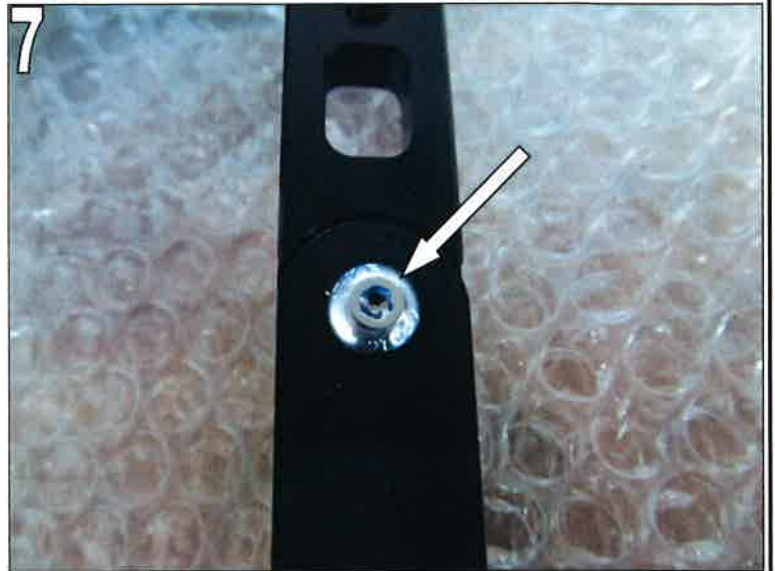

- Fix the reflector to the bracket with washer and self-locking nut. (Fig. 8)

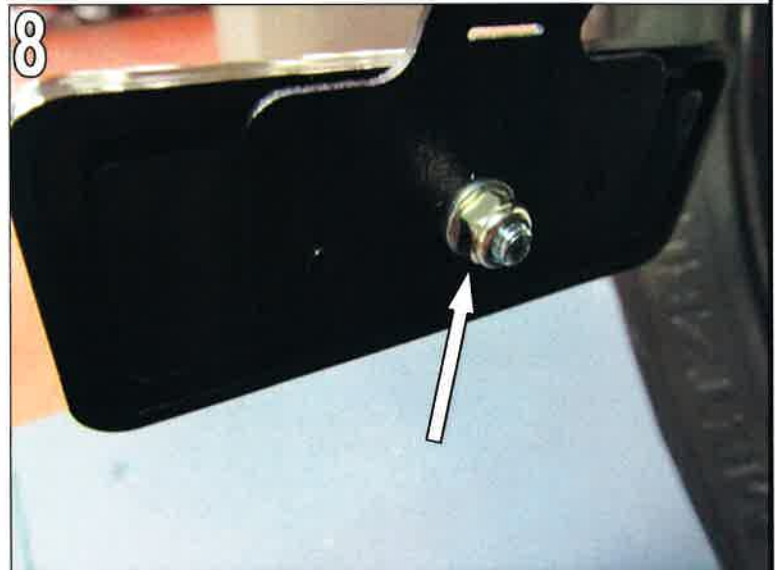

- Press the supplied sealing plugs into the connection point of the lintel pad holder. (Fig. 9)

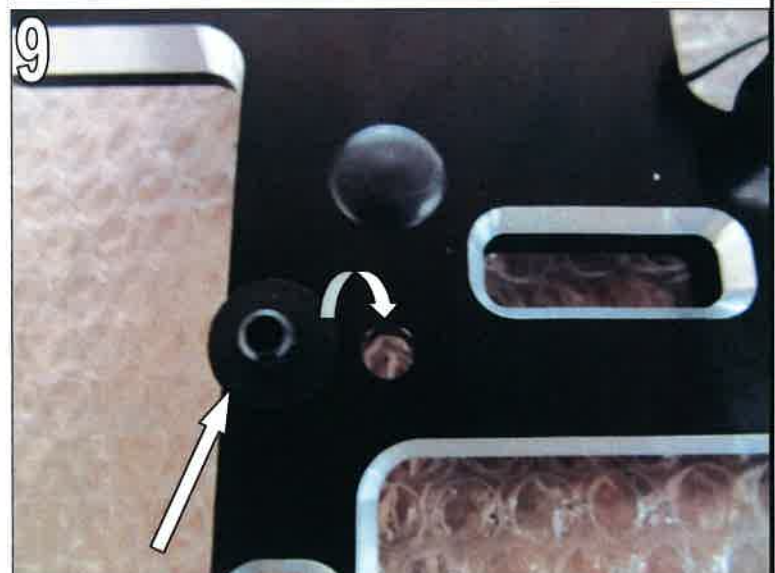


Assembly instruction



AC Schnitzer license plate holder without drop pad

2. Installation

- Attach prepared license plate holder to the vehicle and fasten it at the end. Tightening torque of the M6 x 55mm screws: 9.5 Nm, Screws M8 x 65:24Nm (Fig. 10)

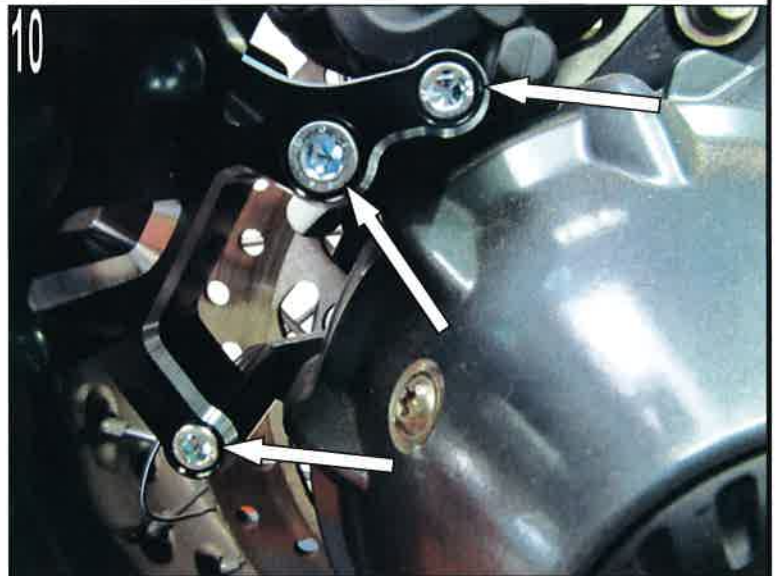

- Fit the mounting screws of the licence plate holder with the supplied cover caps. (Fig. 11)



- Lead the cable of the number plate lighting along the brake calliper, the brake line, the standard parallel strut and the rear of the frame towards the cable harness below the passenger seat. If necessary, extend the cable with the supplied 2-core cable and soldered connectors. (Fig. 12)



Assembly instruction No.: S700-68814-15/ Standing: 05.10.2017 RVo

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Phone. 0241/5688 -300 fax -135 / www.ac-schnitzer.de

Assembly instruction

AC
SCHNITZER

AC Schnitzer license plate holder without drop pad

2. Installation

- Connect the installed cable to the standard wiring harness or preferably to the wiring harness of the AC Schnitzer inner mudguard. Pay attention to polarity!


Licence plate light:

Black/white cable -> + pole

Black cable -> Vehicle mass


- Ensure that the standard indicator lighting is deactivated.

(Fig. 13)

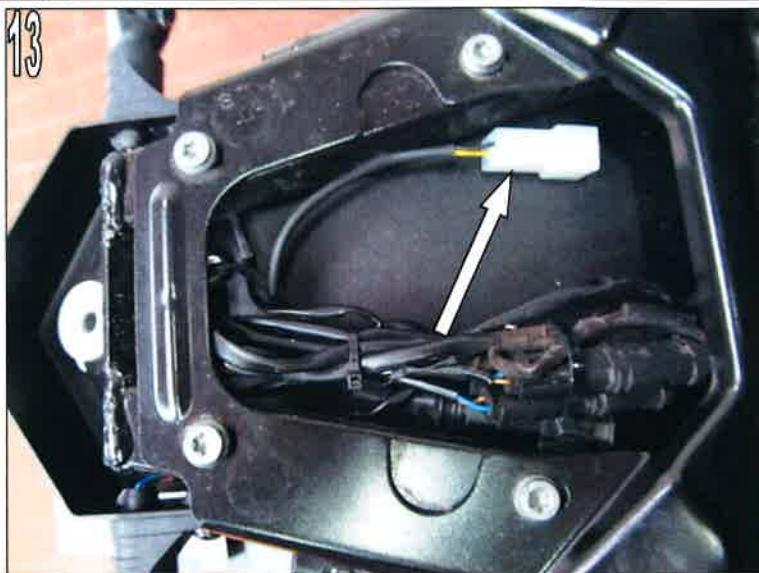

- Apply AC Schnitzer vitro stickers at the desired place. Degrease the bonding area beforehand.

(Fig. 14)

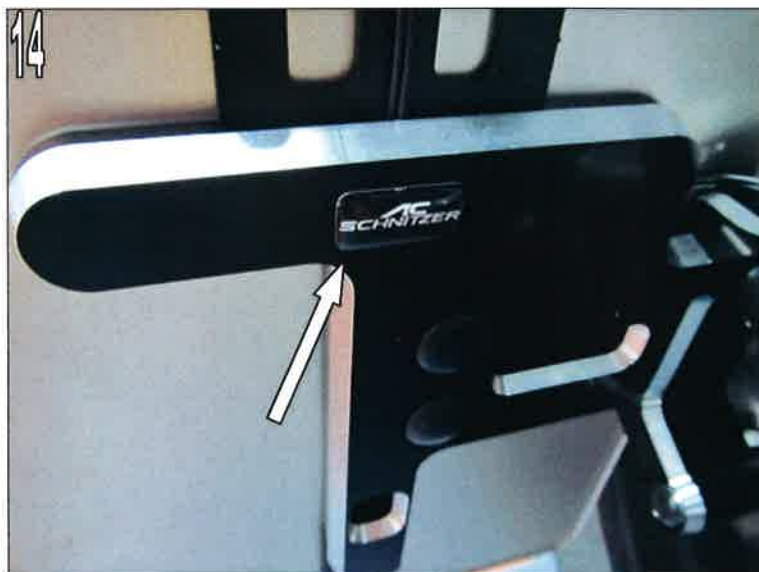

- The component has to be registered!
- The marking required for registration can be found on the bottom of the basic holder.

(Fig. 3)

- Inform customers about limited freedom of inclination!



Further AC Schnitzer products for your BMW R nineT



*AC Schnitzer Paralever brace, adjustable
(with TÜV parts certificate)*

S700-68789-15



*AC Schnitzer fork bridge Heritage
(with TÜV parts certificate)*

S211-68852-15



*AC Schnitzer tank cover
S700-67942-15*



*AC Schnitzer liquid covers
S700-68774-15*

Further AC Schnitzer products for your BMW R nineT



*AC Schnitzer interior mudguards
The perfect combination to the side marker holder
(with LED Micro taillight)
S700-68810-15*



*AC Schnitzer covers Clamping blocks
S211-68811-11*



*AC Schnitzer handlebar clip on (mit TÜV Teilegutachten)
S217-67171-15*



*AC Schnitzer EVO brake & clutch lever
(with ABE)
S700-68779-63*

*levers are equipped with 2 different outriggers
delivered!*