



-Assembly instructions-

Handlebar riser

– S1000R Model 2021 –



Part-no.: S700484-F24

General information!



AC Schnitzer – S1000R –

Important notes:

These installation instructions must be read in full before starting installation work and do not claim to be completeness with regard to each work step. We reserve the right to make technical and editorial changes reserved! AC Schnitzer accepts no liability for damage caused by incorrect installation!

*Check that the goods are complete and undamaged before starting work.
Later complaints cannot be considered.*

These fitting instructions are intended exclusively for use by authorized AC Schnitzer or BMW dealers. dealers. The target group for these fitting instructions is in all cases specialist personnel trained on BMW vehicles with the appropriate specialist knowledge and tools. Knowledge of material properties and standards are assumed! Work on steering systems should only be carried out by qualified personnel! be carried out!

Before assembly:

*The vehicle must be adequately secured against rolling away or tipping over during assembly.
For this purpose, we recommend using the standard main stand or an original BMW assembly stand! Keep children and pets away from the work area!
Risk of accident due to getting caught or electrical short circuit! Therefore, before starting work remove any jewelry (chains, watches, rings, etc.) before starting work!*

After assembly:

After completing the work, carry out a test drive if necessary! After the test drive has been completed, all screw connections must be checked for tightness and all moving parts must be checked for sufficient clearance.

Assembly

All work must be carried out in compliance with the applicable safety regulations (e.g. safety goggles)..

Painting

- not applicable!

Installation time (1 AW = 5 minutes)

The installation time is approx. 5 AW, which may vary depending on the condition and equipment of the vehicle.

Required tools

- Torx key
- Ring wrench
- torque wrench

delivered components



AC Schnitzer



Pos.	Name	Quant.
1	Klemmbockerhöhung BK9 für BMS1T	2
2	Schraube ISO 7380 - M10 x 90 - 10.9	2

Montageanleitung Nr.: S700484-F24 / Stand: 15.09.2021


AC Schnitzer - Motorradtechnik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135

Assembly instruction

AC Schnitzer

Assembly

Loosen the cable ties on the left and right of the ignition lock cover.

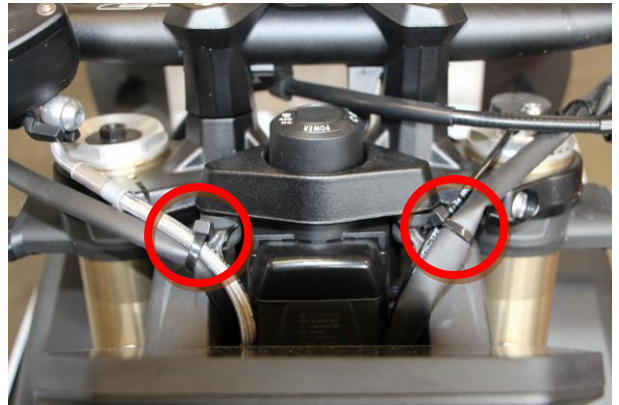

Cover the tank, the cockpit and the left and right sides for protection.

Loosen and remove the four upper clamping block screws.



Carefully place the handlebars on the tank while pulling the clutch cable holder out of the clamps.



Loosen the two clamping block screws, holding the lock nuts under the fork bridge.



Assembly instruction



AC Schnitzer

Remove both clamping blocks and remove the screws.



Fit the clamping brackets to the triple clamp using the enclosed raised sections and the longer screws.



Attach both clamping blocks as original.

Tightening torque 25 Nm.



Insert the clutch cable holder and the handlebars into the clamps

Align the handlebars and fasten them with the upper part of the clamp and the four original screws according to the manufacturer's instructions.

Tightening torque 19 Nm.

Secure the cables again with cable ties.



Montageanleitung Nr.: S700484-F24 / Stand: 15.09.2021

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -300 Fax -135