

AC SCHNITZER

-Fitting Instructions-

Reflector for number plate holder S1000RR



S400572-F17

General Notes!



AC Schnitzer Reflector for number plate holder

Important Notes!

These installation instructions must be read in full before starting the installation work and do not claim to be complete with regard to each work step. We reserve the right to make technical, editorial and content-related changes! AC Schnitzer accepts no liability for damage caused by improper installation!

The goods must be checked for completeness and intactness before work begins.
Later complaints cannot be considered.

Bevor fitting:

For installation, the vehicle must be adequately secured against rolling away or overturning. We recommend using the original BMW assembly stand for this purpose! Keep children and pets away from the work area! Danger of accident due to getting caught or electrical short-circuit! Remove jewellery (chains, watches, rings, etc.) before starting work! All work must be carried out in compliance with the applicable safety regulations (e.g. protective goggles).

Components and surfaces that are glued together must always be cleaned with cleaner !

After fitting:

After completion of all work, a test drive must be carried out! After the test drive has been completed, all screw connections must be checked for tightness and all moving parts must be checked for sufficient clearance.

As the manufacturer, we are obliged to point out that any modifications you make to a vehicle registered for public use must be approved by a test centre and entered in the vehicle documents! As the legal regulations may vary from country to country, we kindly ask you to enquire with the responsible authorities.

Fitting time (1 unit = 5 minutes)

The fitting time is **3 units**.

Required tool:

- Skrewdriver
- Allen key
- Spanner
- Airsaw or simular
- File

Components Supplied!

**AC
SCHNITZER**

AC Schnitzer Reflector for number plate holder

A



1x

B



1x

C



1x

D



1x

E



1x

F



3x

- A AC Schnitzer reflector holder
- B AC Schnitzer reflector with adhesive tape
- C AC Schnitzer connecting piece reflector
- D Fixing screw hexagon socket M5x16mm
- E Self-inserting nut M5
- F Rubber washers for number plates

Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer Reflector for number plate holder

Fitting...

Fig. 1

For better installation of the AC Schnitzer reflector, remove the standard licence plate holder incl. registration plate.



Fig. 2

Using an air saw or similar, cut off the standard reflector flush with the holder at the marked point and deburr with a file or similar.



Fig. 3

Ready-cut number plate holder.



Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer Reflector for number plate holder

Fitting ... (continued)

Fig. 4

Remove the standard rubber buffer from the number plate holder and insert it into the supplied AC Schnitzer connecting piece reflector holder from above, as shown.



Fig. 5

Push the AC Schnitzer connecting piece reflector holder into the number plate holder as shown.

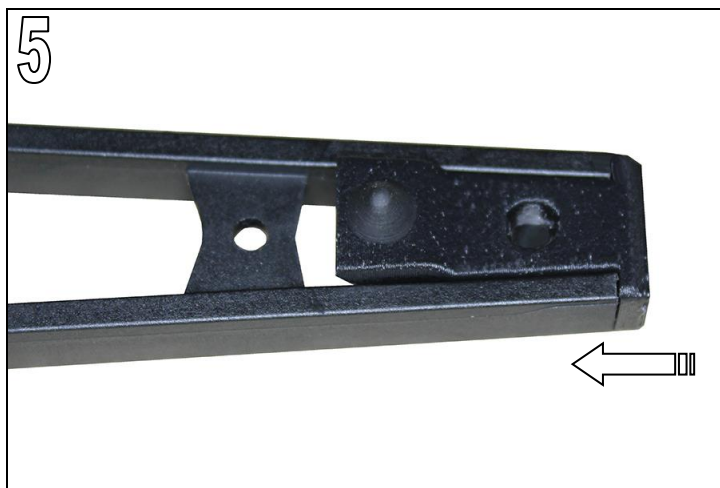


Fig. 6

Make a mark on the number plate holder through the existing hole in the AC Schnitzer connecting piece reflector holder using a suitable marking pin.

Alternatively, fix the AC Schnitzer connecting piece reflector holder with adhesive tape and using a $\varnothing 5\text{mm}$ drill bit through the existing hole in the connecting piece.

Note ! Drill straight.



Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer Reflector for number plate holder

Fitting ... (continued)

Components and surfaces that are glued together must always be cleaned with cleaner !

Fig. 7

Remove the adhesive strip of the AC Schnitzer reflector from the backing film and place it on the back of the AC Schnitzer reflector.


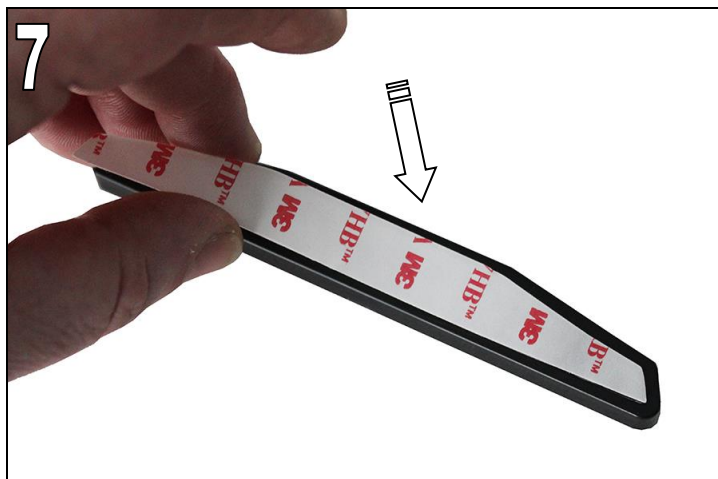


Fig. 8

Remove the protective film from the adhesive tape and stick the AC Schnitzer reflector onto the AC Schnitzer reflector holder. Place the AC Schnitzer reflector on the adhesive surface. There should be an equal distance all around.

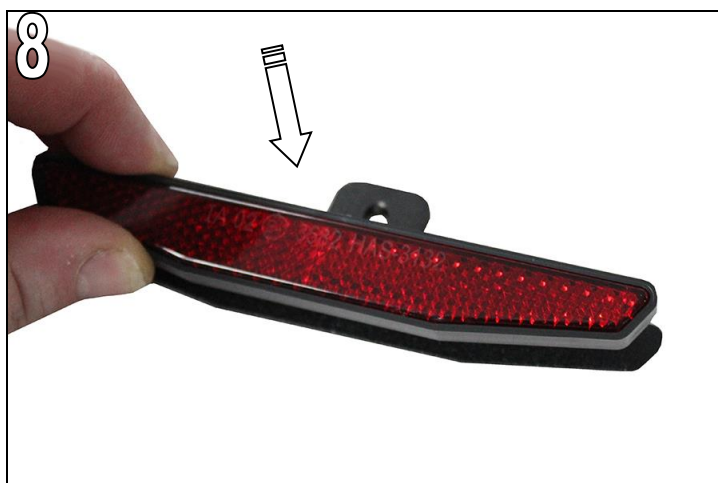


Attention !

Fig. 9

Note the mounting position of the AC Schnitzer reflector holder.

The mounting point points at an angle to the rear!

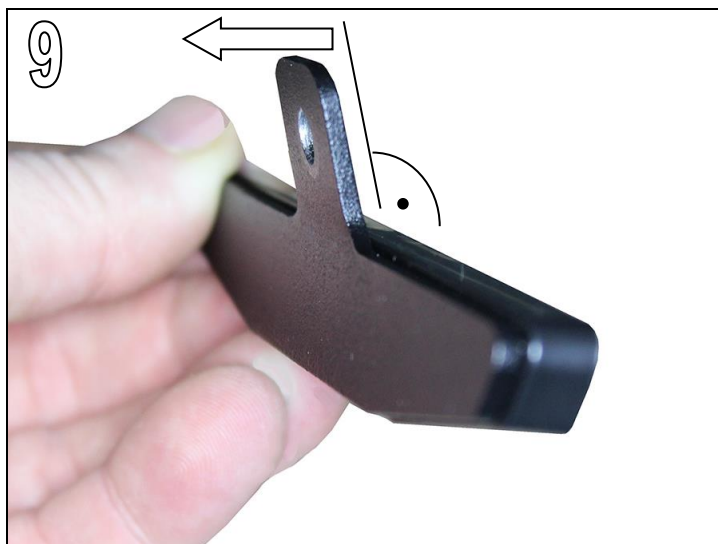

Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer Reflector for number plate holder

Fitting ... (continued)

Fig. 10 & 11

Place the AC Schnitzer reflector holder on the number plate holder and screw it to the number plate holder using the **M5x16mm** fixing screw and the **M5** self-locking nut supplied.

Refit the number plate holder incl. licence plate and the **3 rubber washers** supplied to the vehicle.

Fig. 12

The rubber washers supplied are fitted between the number plate holder and the licence plate.

Errors excepted, subject to change and technical development!

10



11



12



AC
SCHNITZER